

# SET-UP INSTRUCTIONS FOR ZIP CLOSING SIDEWALLS

1.



Fit the canopy on and fully erect your gazebo frame. At this point extend the legs to the lowest height adjustment position.

4.




Once you have attached all the side panels to the framework (as per these instructions), you can then zip the side panels together. **This should be done from the outside of your instant shelter.**

2.



Beginning with one side panel, attach it to the framework and the top concertina trussbars, using the two VELCRO loops which are attached to the top edge of the side panel.

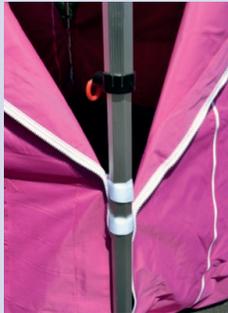

Then, using one VELCRO loop (on each vertical side of the side panel), attach them to the legs of the shelter.

**DO NOT** at this stage attach the long horizontal strips of VELCRO (across the top of the side panels) to the corresponding VELCRO strip along the canopy edge.



3.



Repeat this process until all remaining sidewalls are attached to the gazebo frame in the same manner.

5.



Once the first 4 steps have been completed; beginning in one corner, attach the long horizontal strips of VELCRO (across the top of the side panels) to the corresponding VELCRO strip along the canopy edge, joining them together. **This should be done from the inside of your instant shelter.**


# SET-UP INSTRUCTIONS FOR ZIP CLOSING SIDEWALLS

6.



Feed the side panels under the canopy in each of the corners. **This should be done from the outside of your instant shelter.**

7.

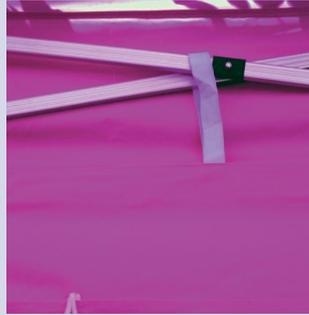

Adjust the VELCRO loops (that you fixed to the concertina trussbars in Step 2), so that they take the weight of the side panels and most importantly, keep the canopy overhang section nice and flat, without sags or creases.

8.

If weather/wind conditions allow, the final step to achieve a perfect fit and finish is to now reposition the gazebo legs so they are vertically straight. By using the legs to tension all side panels correctly you can then peg the footplates to the ground (with the pegs supplied). This will guarantee a nice smooth result.

If weather/wind conditions don't allow the above, the gazebo frame should be pegged down after Step 1 to ensure security.



**NOTE:** Please read the manual thoroughly and make sure you follow these instructions step-by-step to proceed in the easiest way possible.